


EXPLODED VIEW
MODEL: B5C

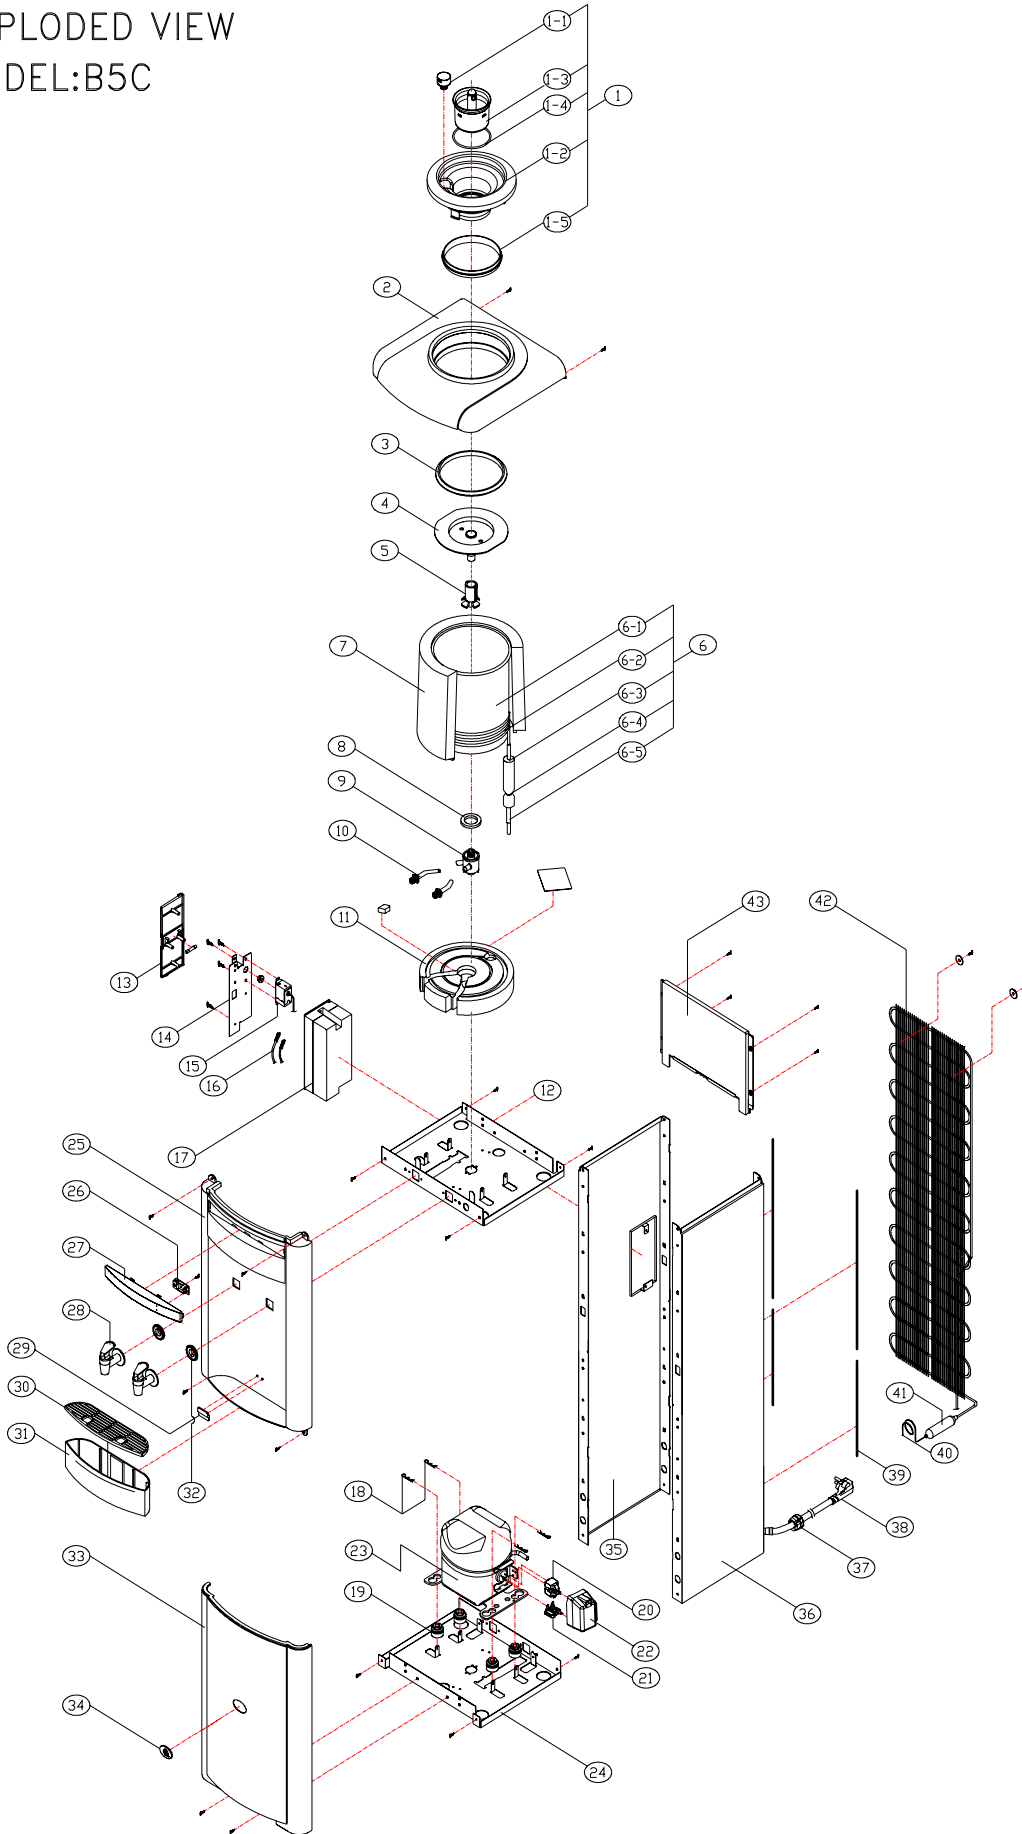

B5C SERVICE PARTS LIST

Updated December 30, 2008

No.	Part name	Part No.	Q'ty	No.	Part name	Part No.	Q'ty
1	No-Spill Kit (CN2-PA)	24-003	1	18	Split Pin	12-009-001	4
1-1	Air Filter Ass'y	24-101-008	1	19	Seat Rubber-Compressor	09-048-002	4
1-2	Bottle Guide	03-110	1	20	PTC	05-021-003	1
1-3	Probe Housing	03-111	1	21	OLP	05-020-003	1
1-4	Housing Packing	09-038	1	22	PTC Cover	05-022-001	1
1-5	Bottle Guide Packing	09-037	1	23	Compressor	05-003B-029	1
2	Top Cover	03-002	1	24	Base-Compressor	02-020-007	1
3	Gasket Cold Water Tank	09-026	1	25	Front Panel-Upper	03-003	1
4	Cold Water Baffle	03-010	1	26	Pcb Display	07-007-005	1
5	Patition Tube Fitting Nut	03-067	1	27	Display Name Plate	03-004	1
6	Cold Water Tank Ass'y	22-009	1	28	Faucet Ass'y	23-002A-001A 23-002A-003A	2
6-1	Cold Water Tank	02-003-007	1	29	Stopper Drip Tray	03-008	1
6-2	Evaporator Copper Tube	10-002	1	30	Grid-Drip Tray	03-007	1
6-3	Cable Tie	17-003	2	31	Drip Tray	03-006	1
6-4	Insulation-Suction Tube	08-005-004	1	32	Silicone Washer-Faucet	09-003	2
6-5	Heat Shrinkable Tube	05-005	1	33	Front Panel-Lower	03-005	1
7	Side Insulation-Cold Water Tank	08-002	1	34	Lower-Name Plate	03-021	1
8	Silicone-Outlet Pipe	09-001	1	35	Side Panel-(Right)	02-018-002	1
9	Patition Tube	03-065	1	36	Side Panel-(Left)	02-018-003	1
10	Outlet Nipple Cold Water	03-099	2	37	Cord Bushing	07-006-003	1
11	Lower Insulation-Cold Water Tank	08-014-001	1	38	Power Supply Cord	07-052-005	1
12	Base-Cold Water Tank	02-020-007	1	39	Protector-Side Panel	03-020	4
13	Door-Control Panel	03-050	1	40	Capillary Tube	10-003-001	1
14	Control Panel	02-024-011	1	41	Drier	05-002-001	1
15	Cold Water Thermostat	07-001	1	42	Wire Condenser	05-008-002	1
16	Wire Ass'y	07-019-009	1	43	Rear Panel	03-049	1
17	Box-Control Panel	03-068	1				